

**IMPORTANT:** Blasting Box produces High Voltage  
**DO NOT** touch output terminals when charged and do not open box.

## **INSTRUCTIONS FOR THE ODA ENTERPRISES 8.7j CD BLASTING BOX**

- 1) CD Blasting Box requires two 'AA' batteries in parallel. Batteries are accessed by sliding back compartment cover. Note polarity marks. Fresh alkaline batteries are recommended (output close to 1.6 volts), Radio Shack Alkaline highly recommended. Nickel Cadmium batteries are not recommended.
- 2) Two rocker switches on front control the CD Blasting Box operation. Left hand switch is the Charge/Discharge. Right hand switch is the Fire. By depressing and holding down the left switch, the unit will begin to charge. The neon bulb will begin to flash at 270 volts (approximately 1 second) indicating unit is ready to fire. Depressing the right switch will place High Voltage onto the output terminals.
- 3) When both switches are in the OFF position, the unit will be in a safe/uncharged mode. It is recommended to remove batteries when not in use, install fresh new ones just before show time.
- 4) CD Blasting Box is intended for firing electrical igniters (singly or in series). Output terminals should not be shorted. A direct short on output terminals will degrade the firing switch.

**ODA Enterprises**  
**5072 Strafford Oaks Drive**  
**Sebring, FL 33875**

email: [octavioag@comcast.net](mailto:octavioag@comcast.net)  
web: [www.electricalfiringsystems.com](http://www.electricalfiringsystems.com)

